

NOTE: If you have purchased a pump which has both inflating and deflating valves, make sure the hose is attached to the deflating valve. Then, simply place the end of the hose into the inflation/deflation opening in the unit, turn on the pump and the unit will automatically deflate. If your pump does NOT have this feature, once the side walls of the unit are deflated, press gently on the top of the unit to help air escape from the deflation opening. DO NOT jump or lie on the unit to help deflate it as doing so may damage the unit and cause bodily injury to the jumper.

4. Once deflated, fold the unit as it came out of the package and use the package for storage. Store indoors in a dry place.

DO NOT leave the unit in any area where it might become damaged.

Cleaning Instructions: Surface wash with water only. Do Not use chemicals or abrasives. Dry thoroughly before storing.

⚠ WARNING:

1. **Warning. Only for domestic use.** Not for use in public areas or as a rental.
2. DO NOT use this unit in a manner other than intended.
3. Instruct children on proper use of the unit.
4. DO NOT allow attachment of items such as jump ropes, pet leashes, cables, etc., to product as they may cause a strangulation hazard.
5. DO NOT drag the unit as doing so may cause irreparable damage.
6. Do not place the Bounce House on hard surfaces. Unit is to be used on soft ground only.
7. Allow only ONE CHILD at a time inside the unit.
8. DO NOT allow toys or any other objects inside the unit or in the surrounding area.
9. Remove shoes, eyeglasses, helmets, headgear, loose clothing, hoods, scarves, sharp objects or any clothing containing drawstrings before playing in the unit.
10. Examine the unit periodically for potentially unsafe conditions such as abrasions, holes or tears in the plastic.
11. DO NOT allow child to attempt to climb on the netting as doing so may cause a tipping hazard.
12. DO NOT allow child to climb on the OUTSIDE of the unit.
13. Keep pets away from the product.
14. Maximum allowable weight of person using the unit is 70 lb. (31.7kg)
15. Check the product during use and reinflate as appropriate.
16. Ensure the play area is free from hazards such as furniture, walls, sharp objects and other hard surfaces. before inflating the unit or playing in it.
17. Do not leave children unattended at any time.
18. THIS IS NOT A FLOTATION DEVICE. DO NOT use it in water.
19. Check the product during use and inflate again as appropriate.
20. DO NOT use the unit in windy conditions.
21. Make sure the unit is thoroughly dry before storing.
22. DO NOT use the unit if it is wet as it may become slippery.

ATTENTION:

IF YOU ENCOUNTER PROBLEMS, OR HAVE QUESTIONS,
PLEASE DO NOT RETURN THE BOUNCE HOUSE TO THE PLACE OF PURCHASE.
PLEASE CALL OUR QUALIFIED CUSTOMER SERVICE TECHNICIANS AT 1-800-321-0183

Please keep this manual as it contains important information.



0212-1-E

© The Little Tikes Company,
an MGA Entertainment company.
LITTLE TIKES® is a trademark of
Little Tikes in the U.S. and other countries.
All logos, names, characters, likenesses,
images, slogans, and packaging appearance
are the property of Little Tikes.
Little Tikes Consumer Service
2180 Barlow Road
Hudson, Ohio 44236 USA
1-800-321-0183
Printed in China

www.littletikes.com




Bounce House Trampoline

Age 3-5 years

Item no.: 620058

ADULT ASSEMBLY REQUIRED

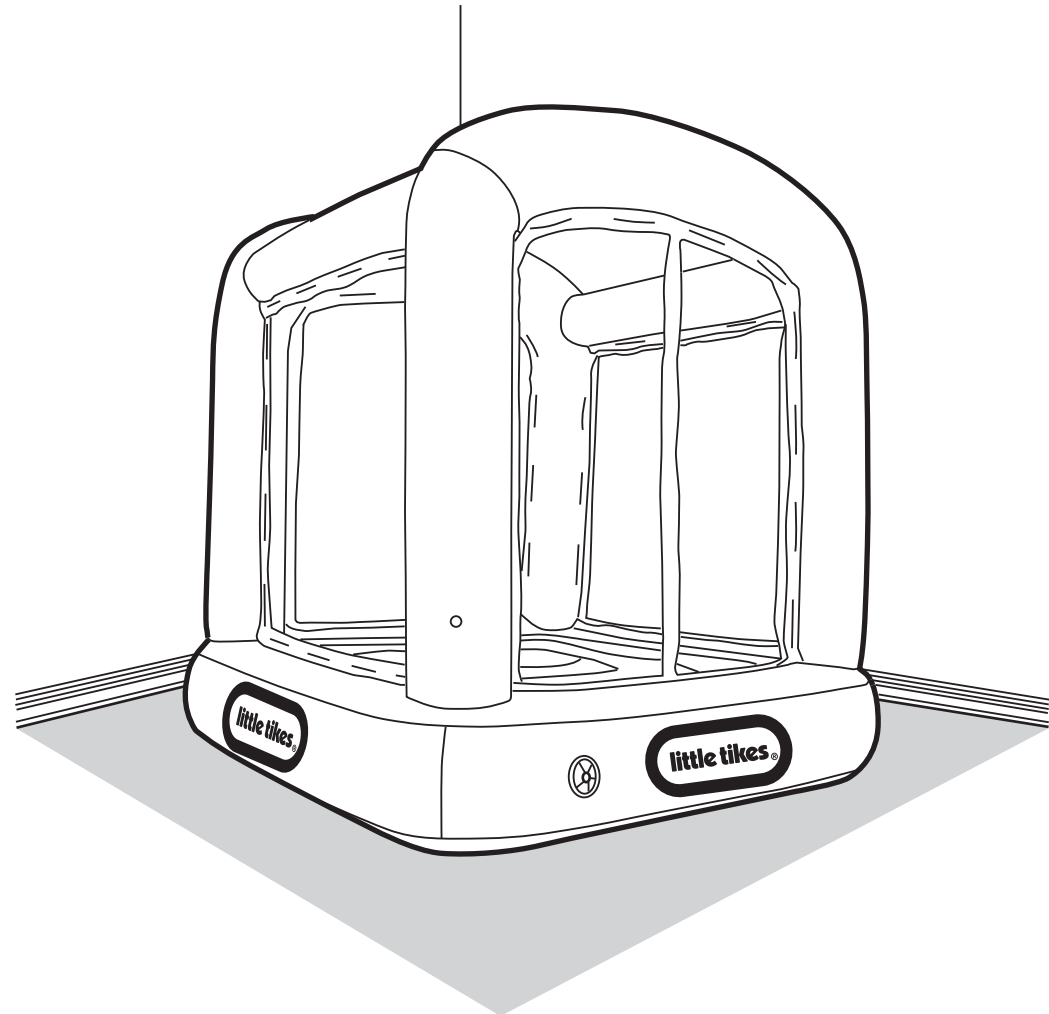


INTRODUCTION

It's time for some big, bouncing fun with the Little Tikes® Bounce House! This inflatable fun center is soft, safe and provides hours of bounce-ability.

CONTENTS

- (a) 1 Little Tikes® Bounce House
- (b) 2 Repair Patches

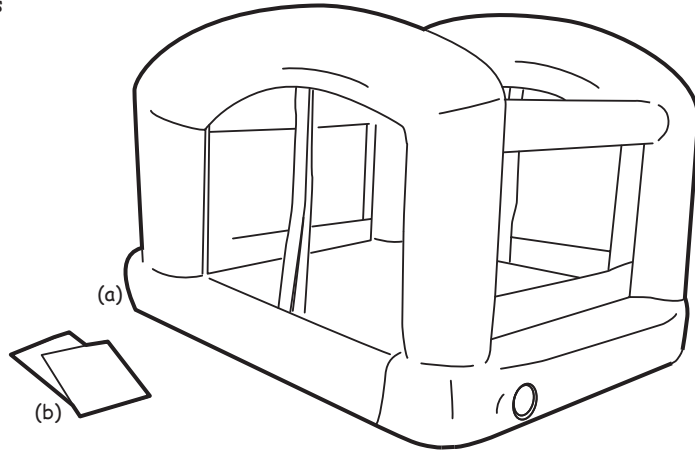


Illustrations may vary from actual contents.

BEFORE YOU BEGIN

An adult must set up and inflate the unit. Here's how:

1. Remove the unit from its packaging and save the packaging to store it in when finished playing.
2. Unfold the unit in a flat area which has been cleared of all objects.

NOTE: DO NOT place the unit on an uneven surface or a surface which may allow the unit to slide.

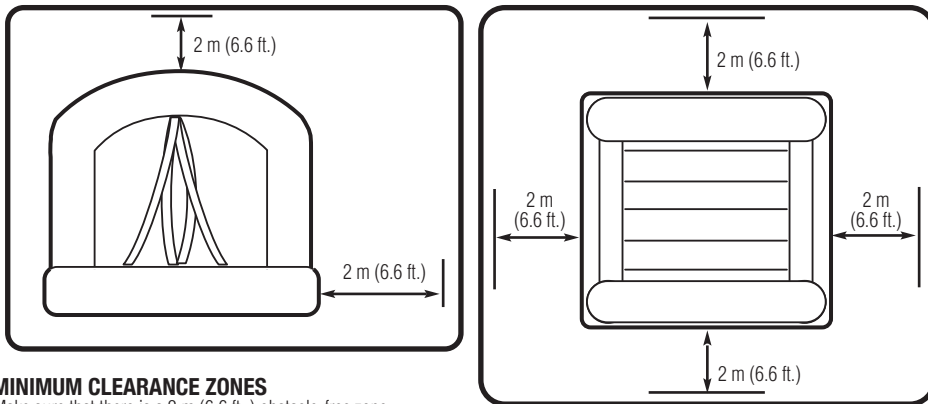

MINIMUM CLEARANCE ZONES

Make sure that there is a 2 m (6.6 ft.) obstacle-free zone around the product.

3. Lift the plug from the inflation/deflation opening on the front edge of the unit. (Fig.1)
4. Place the hose of an electric pump (hose and pump not included) into the opening. (Fig.2)

NOTE: Pump may be purchased at most hardware, sporting goods and other retail outlets. Some pumps have inflate and deflate valves. Follow pump instructions when attaching hose.

5. Inflate all chambers using 1 pc large air valves and 2 pcs small air valves. (Fig.6)

⚠ CAUTION - DO NOT allow children to play on or in the unit until it is fully inflated. Inflate the unit only to the point that it is firm but not hard and wrinkles are still visible in the area of the welded seams. Maximum inflation pressure is 0.3 psi, 0.0207 bars. Do Not over-inflate the unit. Doing so may cause damage to the unit and bodily injury to the child should the unit fail from over-inflation. Inflation time will depend upon the type of pump being used.

6. Once the unit is inflated, remove the hose and close the inflation/deflation opening by pressing the plug into the opening firmly to assure there will be no air leakage. (Fig.3)

7. Open the entry into the Bounce House by pulling apart the hook-and-loop closures. (Fig.4)

8. Allow one child at a time inside the Bounce House and securely close the entry using the hook-and-loop closures. (Fig.5)

⚠ WARNING - Instruct the child to bounce in the center of the Bounce House only. Bouncing close to the edges may cause a tipping hazard which may damage the Bounce House and cause injury to the child.

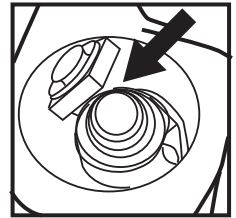


Fig.1

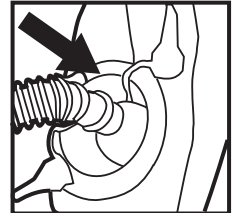


Fig.2

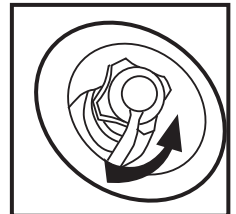


Fig.3

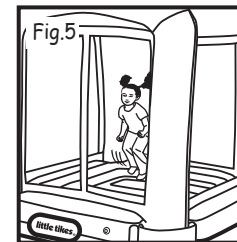


Fig.5

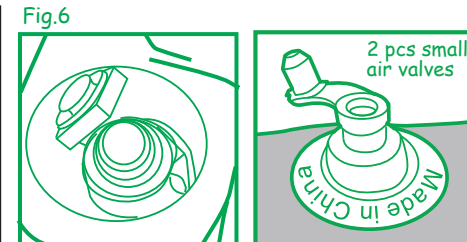


Fig.6

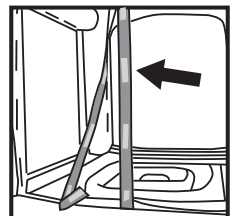


Fig.4

9. Do Not allow the child to attempt to climb on the netting. Netting is in place to assure child does not bounce out of the Bounce House area.

Repairing a Puncture

In the event the Bounce House is accidentally punctured an adult must perform the following steps.

1. Deflate the item, clean the punctured area with water and allow it to dry.
2. Cut a portion of the patch allowing approximately 1½ inch of excess patch material on all sides of the opening to be patched and round the corners.
3. Remove the backing from the patch material, position the patch over the damaged area and smooth out any bubbles with a paper towel.
4. Allow the item to sit for 30 minutes before re-inflating.

Deflation and Storage

An adult must deflate and store the unit. Here's how:

1. Remove the child from the unit.
2. Remove the plug from the inflation/deflation opening.
3. Allow the unit to deflate.